

FIG. 1

SWITCHING SYSTEM 110

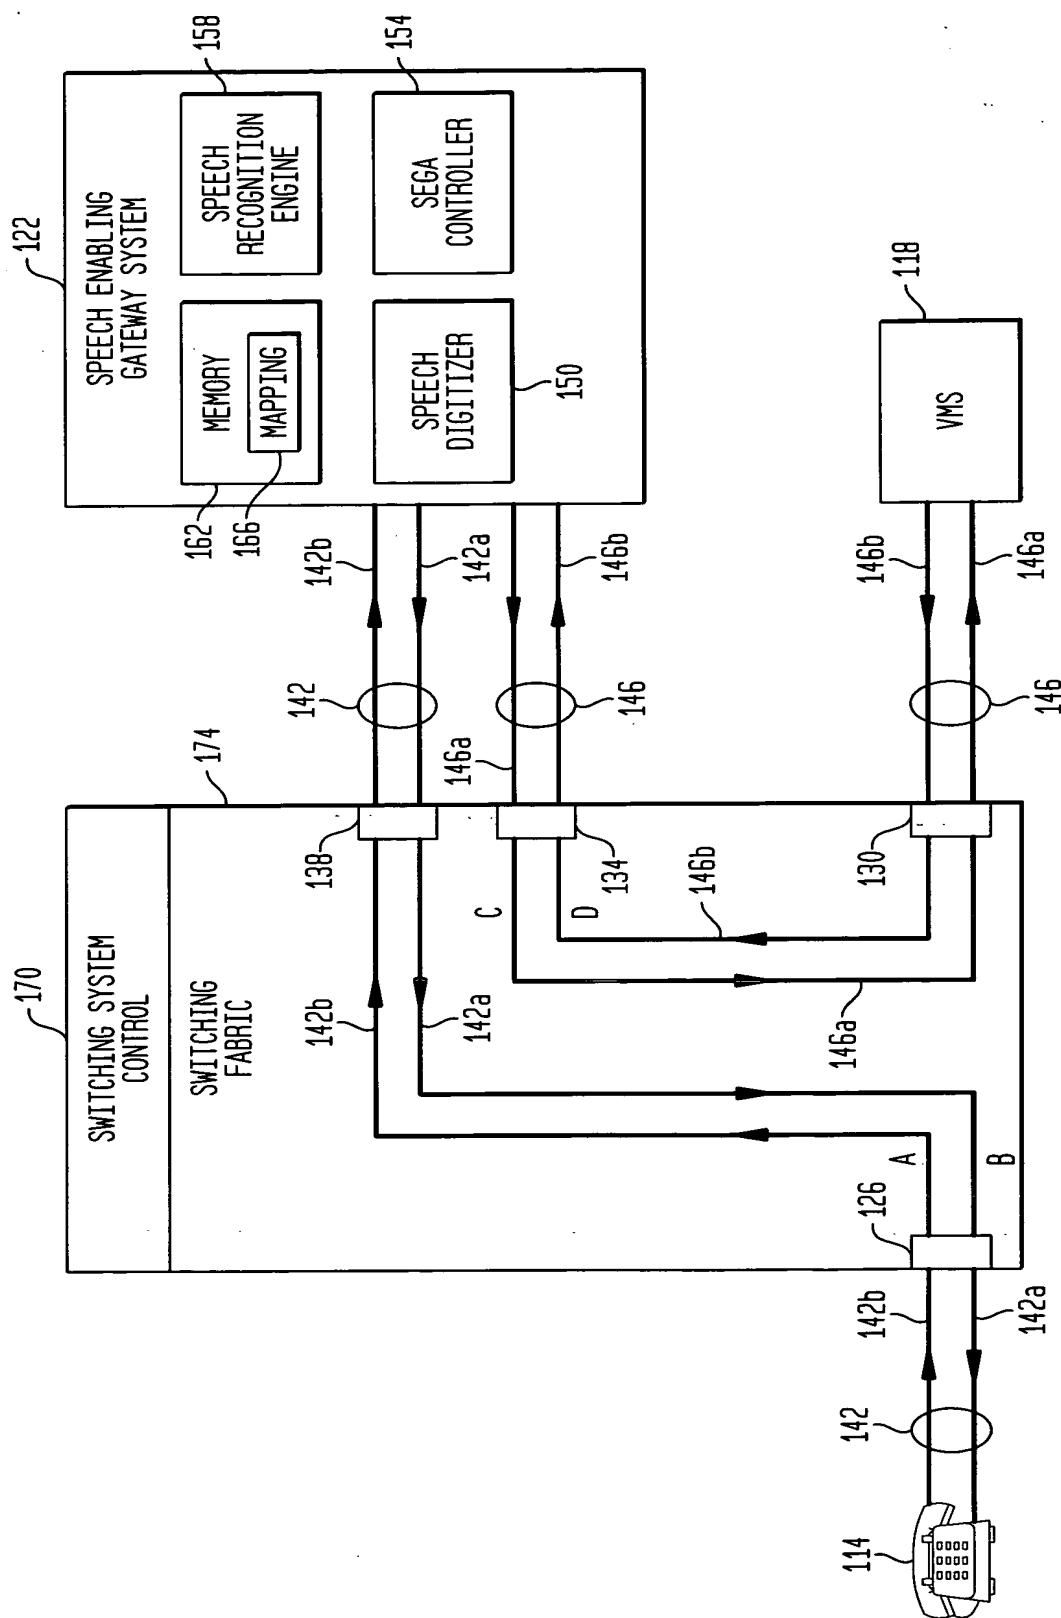


FIG. 2A

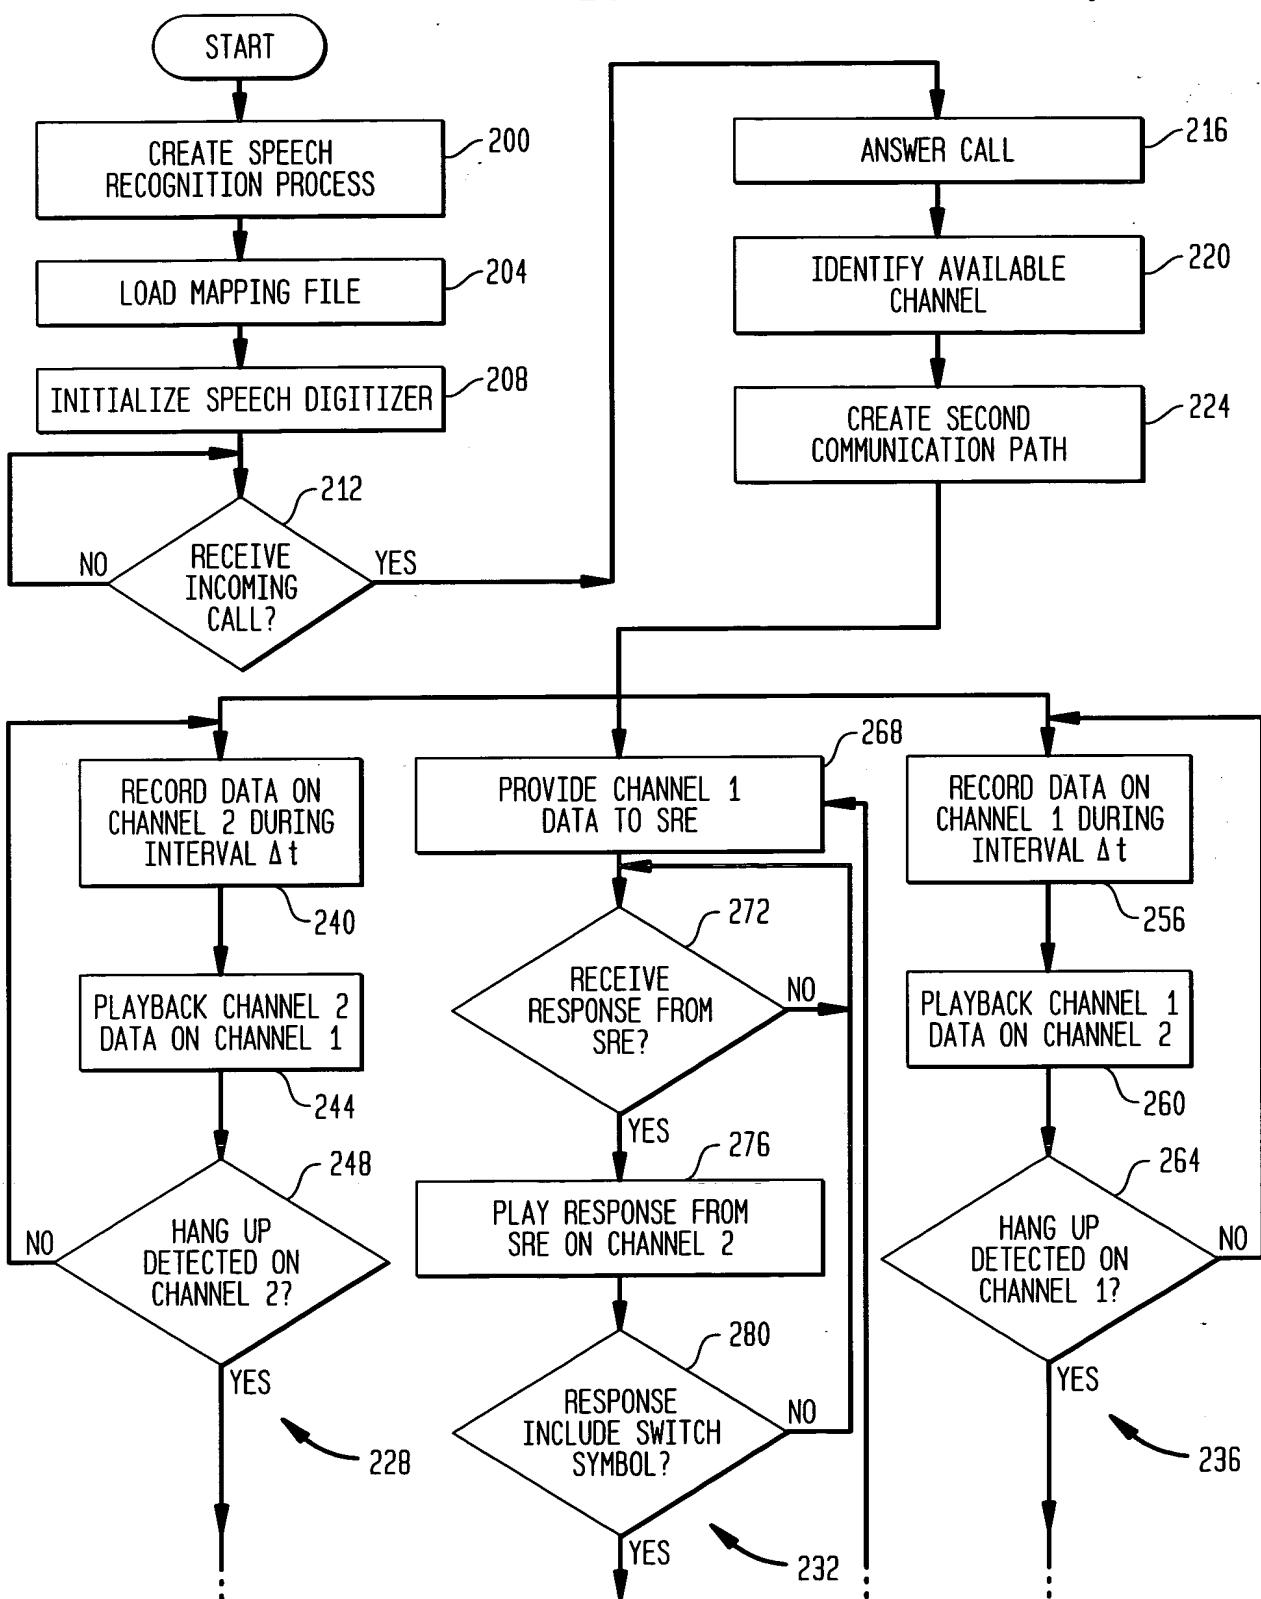


FIG. 2B


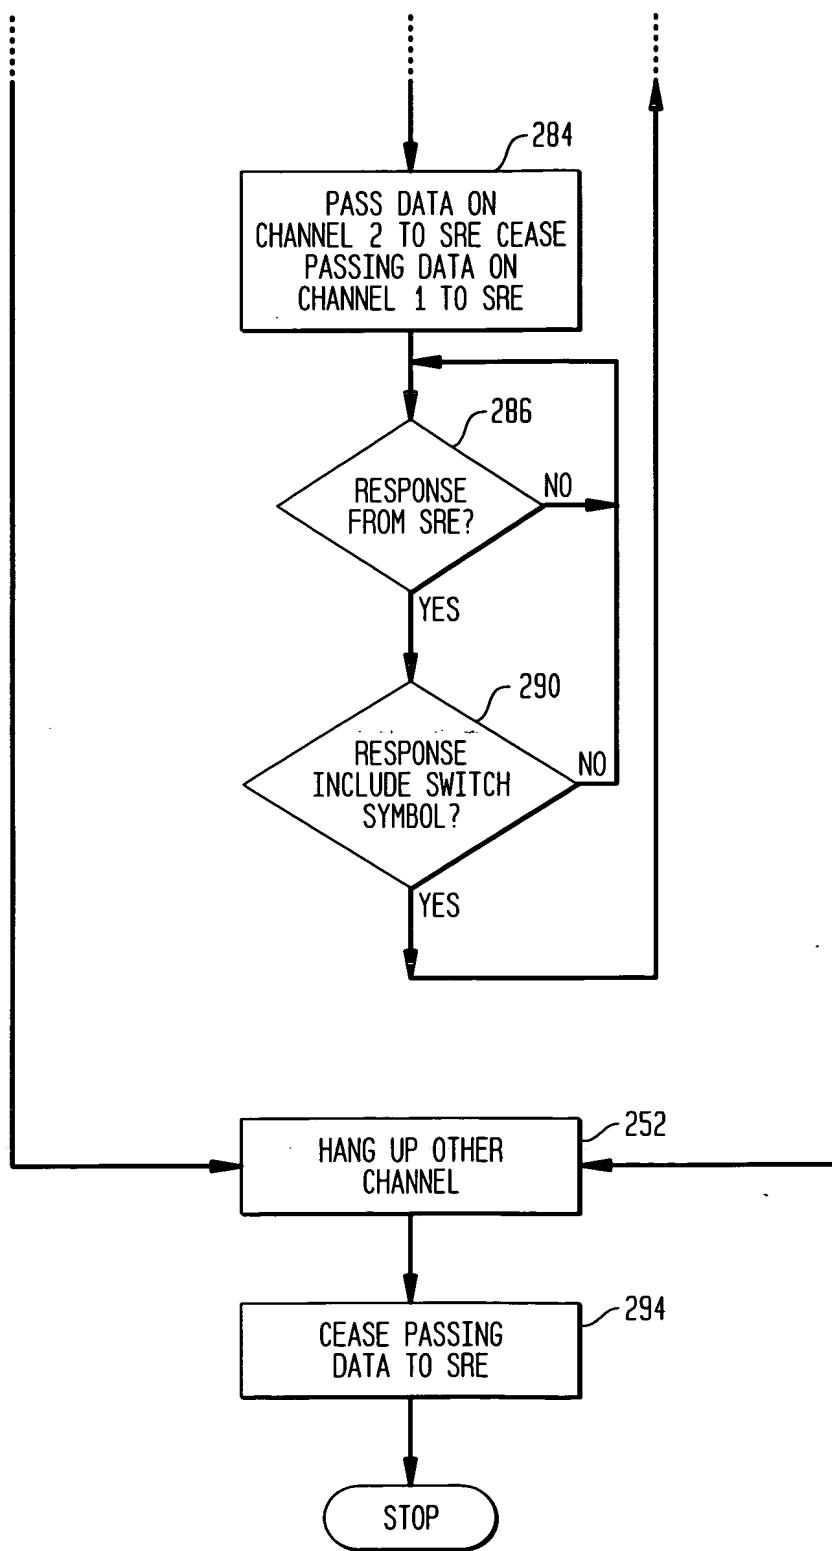


FIG. 3

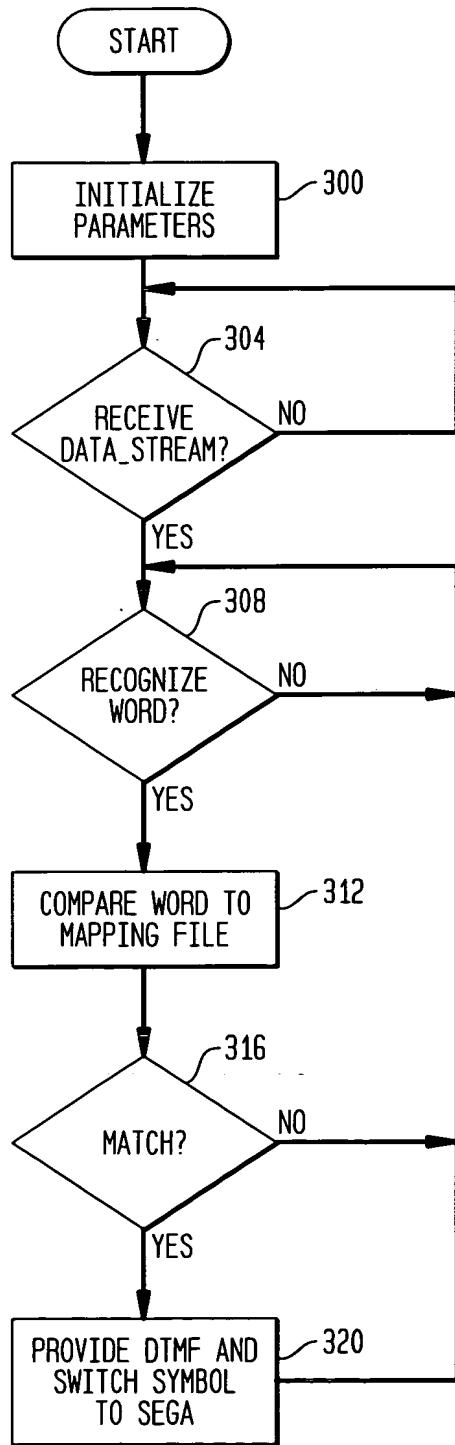

PAGE 5 OF 5

FIG. 4

		400		404		408		412
A	PLAY	REVIEW	LISTEN TO		NEW	MESSAGES		11
B	PLAY	REVIEW	LISTEN TO		SAVED	MESSAGES		12
C	DELETE	ERASE			MESSAGE			337
D	SAVE				MESSAGE			339
E	NEXT	SKIP			MESSAGE			#
F	REPEAT	REPLAY			MESSAGE			334
G	ENVELOPE				INFORMATION			335
H	FORWARD				MESSAGE			336
I	RECORD			a	REPLY			338
J	RECORD			a	NEW MESSAGE			2
K				OPTIONS				0
L				MARK IT	URGENT			2
M					CONFIRMATION			3
N				MARK IT	PRIVATE			1
O				SEND	MESSAGE			#
P	MAIN MENU							33#
Q	CANCEL	FINISHED						*
R	POUND							#
S	STAR							*
T	GOODBYE	HANG-UP	EXIT					***
U	ANY-4-DIGIT NUMBER- i.e. MAILBOX OR EXT.						4 DIGIT NUMBER	